
FISP® 20 Pin JTAG/SWD Adapter FISPAD20R

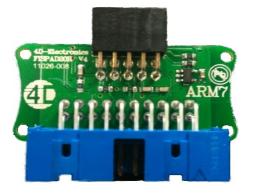

The 20 pin FISP JTAG/SWD adapter is used to program microcontrollers with a standard 20 pin interface using the JTAG or SWD protocol. See our website for pricing and ordering information




Instructions for use

Plug the black 10 pin <u>**FEMALE**</u> socket into the FISP.

Plug the provided 20-20 pin programming cable into the 20 pin socket on the adaptor.

Specifications

- Dimensions
 - 41mm x 20mm x 10.5mm
- Compatible with
 - FISP-JTAG
- Compatible Target Devices include
- Atmel ARM7 JTAG Microcontrollers
- NXP ARM7 LPC Series Microcontrollers

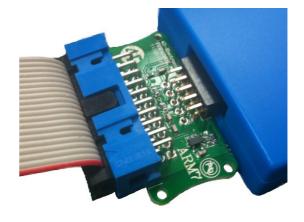

Connections

FISP		
TDI	$\frac{1}{10}$ 0^{2}	VCC
TMS	$\frac{3}{-3}$	GND
RESET	$\frac{5}{6}$	GND
TCK	$\frac{7}{10}$ $\frac{10}{10}$	DNC
TDO	-900^{10}	GND
	00	

DNC - Do not connect

TARGET VCC GND TDI GND 6 TMS/SWDIO 8 GND TCK/SWDCLK 10 GND GND 11 12 TDO 14 GND RESET 16 GND 18 GND 17 19 20 GND

Designed & Manufactured by:

4D Electronics Ltd PO Box 13672 Christchurch 8141 New Zealand Phone: +64 3 982 1113 Fax: +64 3 982 1114 Web: http://www.fisp.co.nz E-mail: <u>sales@fisp.co.nz</u>